

Warnings

Be aware that the relay outputs can change state during and after the unit setting (before the unit is used again ensure that the proper setting is done)!!!
 Be aware that the devices connected to binary outputs of the unit may operate upon disconnection of power supply, measurement inputs and/or binary inputs!!!

If the device is used in other way then stated by the manufacturer, the protection provided by the device may be corrupted.

!!! CAUTION !!!

Dangerous voltage

In no case touch the terminals of voltage measurement!

Adjust set points

All setpoints are pre-adjusted to their typical values. Before putting into operation, the setpoints must be checked and/or adjusted to the required values.

Installation may be done by qualified personnel only.

To avoid personal injury do not perform any action not specified in this guide!!!

Note:

ComAp believes that all information provided herein is correct and reliable and reserves the right to update at any time. ComAp does not assume any responsibility for its use unless otherwise expressly undertaken.

2. Installation data

Dimensions

